 


7.19 Resetting the Waste Ink Counter


Your DTG Kiosk II™ includes an easily accessible switch located in the Waste Ink Bottle compartment to assist with the Waste Ink Counter reset procedure:

To reset the Waste Ink Counter using this switch (let's call it the Waste Ink Reset Switch), please follow this procedure:

- ❖ Ensure that the printer is in the Loaded position (press LOAD)
- ❖ Turn the Power off at the control panel of the printer, leave the printer connected to mains power




- ❖ Press and hold the Error Eject and Reset Switch, and while holding them, turn on the power.

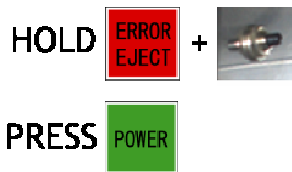

The Error Eject Light and seven ink lights will start to flash.

- ❖ Release the Error Eject button and Reset Switch, and then quickly press & hold only the Reset Switch again for over 10 seconds.

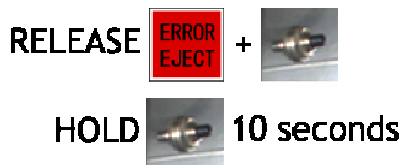

The Error Eject Light, Power Light and seven Ink lights will turn on for two seconds.

- ❖ Once the printer starts going through it's normal initialization sequence, you can release the Reset Switch



The Waste Ink Counter has now been reset.



pdfMachine - is a pdf writer that produces quality PDF files with ease!

Get yours now!

"Thank you very much! I can use Acrobat Distiller or the Acrobat PDFWriter but I consider your product a lot easier to use and much preferable to Adobe's" A.Sarras - USA